

- Press desired storage location button on Console. Listen for fast tone bursts.
- Select specific line, line group, or no selection as required.
 - Press specific telephone line button for line.
 - or-
 - Press 1 - 4 on the telephone dial pad for line group.
 - or-
 - Press 0 on the telephone dial pad for no selection. (When 0 is stored and automatic dialing is used, system will pick line assigned to telephone or last line used.)
- Dial the number sequence to be stored from the telephone dial pad (up to 16 digits).
 - To store a pause, press HOLD on telephone.
 - To store a flash, press TAP on telephone.

To store another number for automatic dialing,

- Press TRNS/CNF on telephone.
- Press next Console button.
- Select line, group or none as described above.
- Dial number sequence as described above.
- Repeat procedure for each desired button.

HINT: Store often-used, host system PBX or CENTREX feature access codes at Console button locations. This will provide one-button access to those host system features.

To end programming,

- Press SPEAKER on telephone.

DIALING NUMBERS

To dial numbers automatically,

- Press desired Console button.
- or-
- If desired button also provides DSS/BLF operation,
 - Press HOLD on telephone and then press desired button on Console.
- When party answers, lift handset of telephone.

FREQUENTLY CALLED NUMBERS

FREQUENTLY CALLED NUMBERS

Phone Care, Inc.
20142 Ecorse Road
Taylor, MI 48180
(313) 388-9670

IMPACT

DSS/BLF Console User's Guide

(For the Digital Telephone System)


For use with following system models:	
• C0408	• D0408
• C0816	• D0816
• C1632	• D1632

COMDIAL
Charlottesville, VA 22906-7266



OVERVIEW

The DSS/BLF Console extends the memory button capability of an adjacent companion telephone by an additional buttons and status lights. The buttons can be programmed for automatic dialing (autodial) and/or direct station selection (DSS) with busy lamp field (BLF).

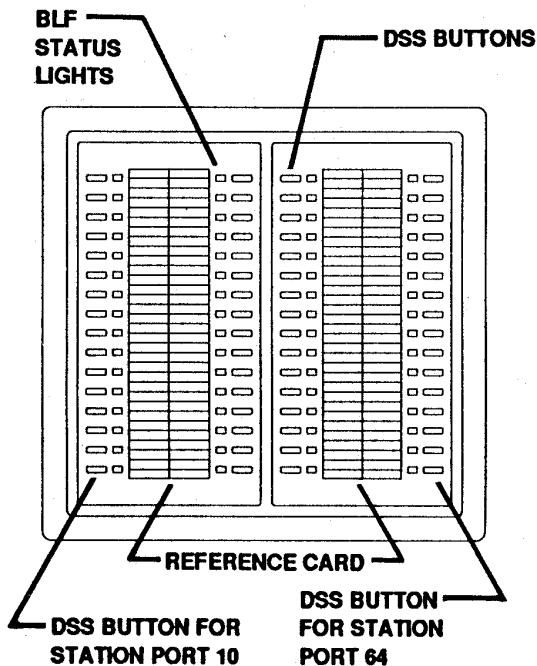

When a DSS/BLF console is initially connected at a station port, the system recognizes it as such, and automatically assigns the station intercom numbers to the console buttons for the maximum number of stations connected to the system. (The maximum coverage is limited by the available buttons.)

DSS/BLF OPERATION

DSS/BLF provides one-button intercom calling with visual indication of station status.

STORING DSS NUMBERS

To program DSS numbers,

- Press **INTERCOM** on telephone. Listen for tone.
- Dial * * 3 from telephone dial pad. Tone will stop.
- Press desired button on Console.
- Dial extension number from telephone dial pad.
- Repeat previous two steps for all desired stations.
- Press **SPEAKER** on telephone when programming is complete.
- Record DSS names or locations on supplied reference card and install card on Console faceplate.
- Lift out plastic reference card cover from Console faceplate.
- Write or type names in squares on reference card.
- Install card under cover and snap cover back into place on Console.

To blank a DSS button,

- Press **INTERCOM** on telephone
- Dial * * 3 from telephone dial pad.
- Press desired console button.
- Press **SPEAKER** on telephone.

DSS CALLING

To voice announce a call to a DSS number,

- Lift telephone handset.
- Press DSS button on Console.
- Voice announce.

NOTE: If you are transferring an outside call to an intercom station, press the TRANS/CONF button on the telephone before pressing the DSS button on your Console.

To tone signal a call to a DSS number,

- Lift telephone handset.

- Press DSS button on Console.
- Press **INTERCOM** on telephone. When station answers, two-way conversation can take place.

The BLF lights that are adjacent to the DSS buttons on the Console indicate the status of the stations programmed at the buttons. Status conditions are as follows:

BLF STATUS	STATION STATUS
Light Off	Station Idle.
Light Flashing	Station calling you on intercom line.
	Station ringing if monitoring feature is active.
Light On Steady	Station busy.
	Station in do not disturb mode.
Light Flutters	Station has left call-back message.

NOTE: An autodial number also can be programmed as a secondary function at every DSS/BLF memory location. See Automatic Dialing instructions for details.

AUTOMATIC DIALING

Automatic dialing provides one- or two-button calling of often used numbers and access codes as a secondary function of the DSS buttons. For a primary autodial function, blank the DSS/BLF function at the desired buttons.

STORING NUMBERS

To store a number for automatic dialing,

- Press **INTERCOM** on telephone. Listen for tone.
- Dial * * 1 from the telephone dial pad. Tone will stop.